


**Retail Inkjet Solutions InkCenter Interconnect Board Replacement Instructions**  
***Please Return Defective Interconnect Board Using Return Label Provided.***

**Interconnect board replacement**

- Remove the black plastic tester cover.
- Remove the **four T-10 screws** holding the interconnect board using the provided T-10 Allen wrench. (Red arrows below)

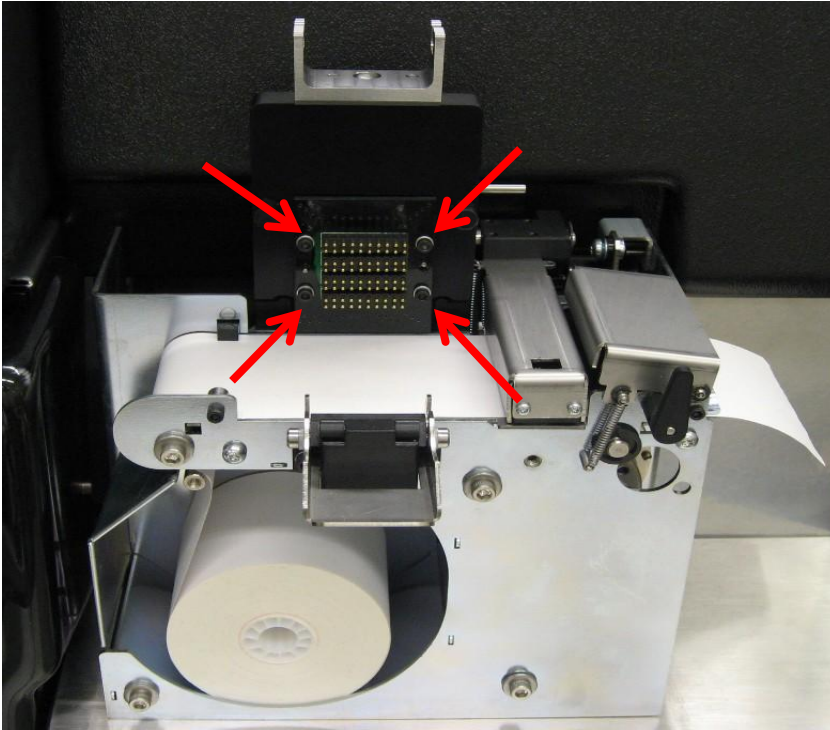

- Remove the old board by pulling it straight out and off the dowel pins.
- Put the old board aside
- There is one connector at the back of the interconnect board and the tester. They are keyed and will only plug in one way.  
***Hint:*** If you can read the writing on the front of the interconnect board, it is orientated correctly.
- Slip the new board over the dowel pins then use the 4 T-10 screws to refasten to the tester assembly. Please keep the T-10 Allen wrench and discard the damaged board.
- Replace the tester cover.
- Please contact RIS at 888-231-9379 with any issues or questions.

Thank you,

-The Retail Inkjet Solutions Team



[www.retailinkjet.com](http://www.retailinkjet.com)