
Index

A

AC wiring diagram1-37
AC/DC distribution PC board5-164
 cable connections5-165
 DC power supply cable5-154
 removing5-164
 replacing5-165
AC/DC power distribution PC board8-25
adapter1-2
 fill1-17
 prep station housing1-13
adapter drawer
 removing5-43
 replacing5-45
 track slides5-43
adapter not detected
 fill station4-7
 prep station4-6
 tester station4-13
adapters
 initializing3-9
 refill3-8
 test3-8, 6-5, 6-6
adapters, orderable parts8-41

C

cable
 AC/DC distribution PC board
 connections5-165
 CAT5 at ink drawer PC board5-115
 drill press assembly ground5-32
 drill station microswitch5-32
 fluid pump connection5-178
 HP45 station5-75
 infusion pump drive system5-92
 ink nest5-123
 level switch/siphon connection5-197
 liquid separator connection5-186
 main I/O PC board connections5-168
 main I/O PC board to vacuum chamber PC
 board5-53

 main vacuum manifold connections5-209
 scanner5-135
 tester assembly5-132
 tester scanner5-149
 removing5-149
 replacing5-150
 tester station PC board set connections5-171
 touchscreen assembly connections5-159
 upper hood fan5-24
 removing5-24
 replacing5-25
 upper hood fan connection5-21
 upper hood fan spring contacts5-21
 USB to RFID reader board5-53
 vacuum chamber PC board connections5-175
 vacuum chamber reed sensor5-73
 vacuum distribution manifold
 connections5-205
 vacuum pump connection5-201
cable assembly, orderable parts8-29
carboy container, cleaning fluid1-29
cartridge1-3
cartridge clips3-8
chamber leak test6-11
cleaning fluid1-29, 3-7
 container1-29
 level sensor1-29
cleaning fluid tank, level switch/siphon5-196
clips, cartridge3-8
cobalt paper sensor5-147
 removing5-147
 replacing5-148
Compression Fitting5-192
computer components5-159
computer components, orderable parts8-24
computer, touchscreen assembly5-159
 fastener5-160
 mounting keys5-161
 removing5-159
 replacing5-160
container
 cleaning fluid1-29

- waste1-34
- cover fixture, tester station8-21
- cover, tester fixture5-137
 - removing5-137
 - replacing5-138
- cover, tester station8-23

D

- DC power supply5-154
 - cable to AC/DC distribution PC board5-154
 - fasteners5-155
 - removing5-154
 - replacing5-155
- DC wiring diagram1-38
- dimensions3-2
- dispense lines
 - air in lines4-8
 - vacuum chamber5-53
- dispense tubing5-87
- distribution manifold
 - fluid1-30, 5-180, 5-204
 - fasteners5-181
 - removing5-180
 - replacing5-182
 - tubing connections5-181
 - vacuum5-204
 - cable connections5-205
 - fasteners5-206
 - removing5-204
 - replacing5-206
 - tubing connections5-205
- door sensor, vacuum chamber1-21
- door, vacuum chamber1-18
- drawer
 - adapter5-43, 5-45
- drill
 - bit assembly1-7
 - microswitch1-11 motor assembly1-8 press assembly1-6, 8-4
 - shrouded bit5-6
 - side fascia1-5, 5-5
 - fastener5-7
 - mounting keys5-8
 - removing5-5

- replacing5-7
- slide mount assembly1-9
- station components1-5
- testing3-9
- drill bits3-8
- drill press assembly5-31, 8-4
 - fasteners5-33
 - ground cable5-32
 - removing5-31
 - replacing5-33
- drill station1-2, 1-5, 5-28
 - disabling5-28
- drill press assembly5-31
 - fasteners5-33
 - ground cable5-32
 - removing5-31
 - replacing5-33
- external components8-5
- microswitch
 - cable5-32
- motor5-28
 - cable5-29
 - fasteners5-29
 - removing5-28
 - replacing5-29
- parts8-3
- process1-4
- dual prep station configuration1-12

E

- electrical tower fan5-26
 - removing5-26
 - replacing5-27
- error messages4-2
 - V0024-5
 - V0034-5

F

- fan
 - bracket assembly5-17
 - electrical tower5-26
 - removing5-26
 - replacing5-27
 - upper hood5-16
 - cable5-24

removing5-24
replacing5-25
fasteners5-18
removing5-16
replacing5-18
spring contacts5-21
removing5-21
replacing5-21
fasteners, orderable parts8-40
field service tab
tech pane6-8
fill
test3-10
Fill Chamber Gasket Modification5-105
fill chamber receiver latch5-66
removing5-66
replacing5-66
fill chamber receiver plate5-67
removing5-67
replacing5-68
fill chamber receiver seal pad
replacing5-70
fill chamber seal pad5-69
removing5-69
fill chamber seal plate5-71
removing5-71
replacing5-72
fill station1-2, 1-17, 5-52
adapter1-17
adapter not detected4-7
air in dispense line4-8
components1-18
fill chamber receiver latch5-66
removing5-66
replacing5-66
fill chamber receiver pad
replacing5-70
fill chamber receiver plate5-67
removing5-67
replacing5-68
fill chamber seal pad5-69
removing5-69
replacing5-70
fill chamber seal plate5-71
removing5-71
replacing5-72
fill process fails to start4-6
fill process fails to stop4-7
fluid distribution valve5-52, 5-87
fasteners5-88
removing5-87
replacing5-88
HP45 station5-75
fasteners5-77
removing5-75
replacing5-78
vacuum tubing5-75
HP45 station seal5-80
removing5-80
replacing5-83
HP45 tubing5-54
infusion pump drive system5-90
cable5-92
fasteners5-92
removing5-90
replacing5-92
ink drawer PC board5-113
removing5-113
replacing5-115
ink nest5-122
removing5-122
replacing5-124
orderable parts8-9
overflow4-8
process1-4
syringe5-95
removing5-95
replacing5-96 vacuum
chamber5-52
assembly1-19
door1-18
fasteners5-55
overflow4-8
removing5-52
replacing5-55
vacuum tubing5-54
verifying installation5-59
vacuum chamber door5-59
removing5-59
replacing5-63
vacuum chamber gasket5-102
fasteners5-103

- removing5-102
- replacing5-104
- vacuum chamber ink and door sensors5-117
 - removing5-117
 - replacing5-119
- vacuum chamber reed sensor5-72
 - removing5-72
 - replacing5-73
- vacuum chamber spring arm rod5-106
 - removing5-106
 - replacing5-109
- vacuum chamber spring arm tubing5-111
 - removing5-111
 - replacing5-111
- vacuum chamber spring lever5-112
 - removing5-112
 - replacing5-112
- vacuum chamber upper hinge arms5-98
 - remove5-98
 - replacing5-100
- vacuum failure4-7
- float sensors
 - cleaning7-14
 - liquid separator1-34
- flow test, prep station7-17
- fluid distribution manifold1-30, 5-180, 5-204, 8-32
 - fasteners5-181
 - HP45 tubing5-76
 - removing5-180
 - replacing5-182
 - tubing connections5-181
- fluid distribution valve1-22, 5-52, 5-87, 5-96, 8-18
 - dispense tubing5-87
 - fasteners5-88
 - HP45 tubing5-76
 - removing5-87
 - replacing5-88
- fluid pump1-30, 5-178, 8-33
 - cable connection5-178
 - removing5-178
 - replacing5-179
 - tubing connection5-180
- fluid sensor board1-15, 5-37, 8-27
 - connections5-37, 5-41
 - fasteners5-38
 - removing5-37

- replacing5-39
- fluid system1-29, 5-178
 - diagram1-39
 - distribution manifold1-30
 - moving5-49
 - pump1-30
- fluid trap5-210
- front paper guide5-144
 - removing5-144
 - replacing5-145
- front paper guide, tester station8-22

G

- gasket
 - vacuum chamber5-102
 - fasteners5-103
 - removing5-102
 - replacing5-104
- gasket, vacuum chamber8-14

H

- handle, tester station8-23
- hinge arm, vacuum chamber door8-12
- HP 15/451-4
- HP1 Refill Adapter5-217
- HP45
 - test3-10
- HP45 station5-75, 8-15
 - cables5-75
 - fasteners5-77
 - fluid distribution valve connection5-76
 - leaks4-11
 - removing5-75
 - replacing5-78
 - seal5-80, 8-15
 - removing5-80
 - replacing5-83
 - vacuum tubing5-75
- HP45 tubing connections5-54

I

- I/O PC board5-166
 - cable connections5-168
 - fasteners5-167

mounting studs5-168
removing5-166
replacing5-167
infusion pump drive1-22
infusion pump drive system5-90, 8-17
cable5-92
fasteners5-92
removing5-90
replacing5-92
ink
bottle sucked in4-10
fails to dispense4-9
infusion system1-22
loading3-6
priming6-9
sensor5-118
syringes1-22
ink drawer8-18
fails to open4-10
ink drawer PC board5-113, 8-25
cable5-115
mounting grommets5-115
removing5-113
replacing5-115
ink drawer tab
tech pane6-6
ink leak4-10
ink lines
priming3-9
ink nest4-9, 5-122, 8-18
cables5-123
removing5-122
replacing5-124
tubing5-124
ink syringe5-95
removing5-95
replacing5-96
input power3-2
installation requirements2-2
installing3-1
interconnect board, tester station8-22
interconnect PC board5-131, 5-139
removing5-139
replacing5-141
tester1-25
interlock guide plates8-39

interlock guide plates, lubricating7-10

L

labels, orderable parts8-39
latch
fill chamber receiver5-66
removing5-66
replacing5-66
tester5-142
removing5-142
level switch/siphon1-29, 5-196
cable connection5-197
removing5-196
replacing5-198
tubing connection5-197
level switch/siphon assembly8-33
liquid separator1-33, 5-183
cable connection5-186
fails to drain4-15
fasteners5-184
float sensors1-34
cleaning7-14
low vacuum error4-5
main vacuum manifold tubing
connection5-210
removing5-183
replacing5-188
vacuum tubing connection5-184
vacuum want tubing connection5-185
waste tank tubing connection5-186
liquid separator assembly8-32

M

main I/O PC board5-166
cable connections5-168
fasteners5-167
mounting studs5-168
removing5-166
replacing5-167
upper hood fan connection5-21
vacuum chamber board connection5-52
main I-O PC board8-24
main vacuum manifold1-31, 5-209, 8-35
cable connections5-209
fasteners5-211

- liquid separator tubing connection5-210
- removing5-209
- replacing5-211
- tester tubing5-133
- tester tubing connection5-210
- vacuum pump tubing connection5-210
- water trap1-32
- maintenance7-1
 - quarterly7-5
 - semi-annual7-6
 - tech check7-5
- manifold
 - fluid distribution1-30, 5-180, 5-204
 - fasteners5-181
 - moving5-49
 - removing5-180
 - replacing5-182
 - tubing connections5-181
 - main vacuum1-31, 5-209
 - cable connections5-209
 - fasteners5-211
 - liquid separator tubing connection5-210
 - removing5-209
 - replacing5-211
 - tester tubing connection5-210
 - vacuum pump tubing connection5-210
 - prep station1-14, 5-42
 - fasteners5-44
 - removing5-42
 - replacing5-44
 - tubing5-42
 - vacuum distribution5-204
 - cable connections5-205
 - fasteners5-206
 - removing5-204
 - replacing5-206
 - tubing connections5-205
- microswitch
 - drill1-11
 - drill station
 - cable5-32
- motor
 - drill1-8
 - drill station5-28
 - cable5-29
 - fasteners5-29

- removing5-28
- replacing5-29
- mounting keys
 - drill side fascia5-8
 - touchscreen assembly5-161

N

- network setup3-5

O

- orderable parts8-1

P

- paper guide5-144
 - removing5-144
 - replacing5-145
- paper sensor5-147
 - removing5-147
 - replacing5-148
- paper sensor, tester station8-22
- parts list8-1
- PC board
 - AC/DC distribution5-164
 - cable connections5-165
 - removing5-164
 - replacing5-165
 - fluid sensor1-15, 5-37
 - connections5-41
 - removing5-37
 - replacing5-39
 - ink drawer5-113
 - removing5-113
 - replacing5-115
 - main I/O5-166
 - cable connections5-168
 - fasteners5-167
 - mounting studs5-168
 - removing5-166
 - replacing5-167
 - tester backplane
 - cables5-132
 - tester interconnect1-25, 5-139
 - removing5-139
 - replacing5-141

tester station
 cable connections5-171
 tester station backplane1-28
 tester station set1-27, 5-170
 fasteners5-171
 removing5-170
 replacing5-172
 vacuum chamber1-20, 5-52, 5-174
 cable connections5-175
 fasteners5-175
 removing5-174
 replacing5-176
 periodic maintenance7-1
 quarterly7-5
 semi-annual7-6
 tech check7-5
 plate
 fill chamber receiver5-67
 removing5-67
 replacing5-68
 fill chamber seal5-71
 removing5-71
 replacing5-72
 plumbing system1-29
 orderable parts8-30
 power distribution PC board5-164
 cable connections5-165
 removing5-164
 replacing5-165
 power entry module5-157
 removing5-157
 replacing5-157
 power supply8-29
 power supply, DC5-154
 fasteners5-155
 removing5-154
 replacing5-155
 power system5-154
 powering up3-4
 prep a/b flow check6-10
 prep station1-2, 1-12, 5-37
 adapter housing1-13
 adapter not detected4-6
 cables5-13
 components1-12
 dual1-12
 flow test7-17
 fluid sensor board8-27
 fluid sensor PC board1-15, 5-37
 connections5-37, 8-27
 fasteners5-38
 removing5-37
 replacing5-39
 fluid sensor PC board
 connections5-41
 maintenance7-12, 7-17
 manifold5-42
 fasteners5-44
 removing5-42
 replacing5-44
 tubing5-42
 manifold assembly1-14
 orderable parts8-6
 premature vacuum4-5
 process1-4
 receiver plate8-7
 reed sensor5-46
 removing5-46
 replacing5-47
 verifying installation5-48
 seal8-7 tubing5-
 13 vacuum
 error4-5
 vacuum filter5-49, 8-8
 removing5-49
 replacing5-50
 vacuum lines
 cleaning7-12
 priming syringes6-9
 pump
 fluid1-30, 5-178
 cable connection5-178
 removing5-178
 replacing5-179
 tubing connection5-180
 infusion drive system5-90
 removing5-90
 replacing5-92
 ink infusion1-22
 vacuum1-31, 5-201
 cable connection5-201
 fasteners5-202

-
- removing5-201
 - replacing5-202
 - tubing connection5-201
- Q**
- quarterly maintenance7-5
- R**
- rear access panel5-10
 - remove5-10
 - replace5-10
 - receiver plate, vacuum chamber8-13
 - reed sensor
 - prep station5-46
 - removing5-46
 - replacing5-47
 - verifying installation5-48
 - vacuum chamber5-72, 8-16
 - removing5-72
 - replacing5-73
 - vacuum chamber ink and door5-117, 5-119
 - removing5-117, 5-119
 - refill adapters3-8
 - refill process1-4
 - regulator, vacuum5-213
 - removing5-213
 - replacing5-215
 - spanner nut5-214
 - tubing connections5-214
 - RFID reader1-21, 8-16
 - RFID reader board5-53
 - rod
 - vacuum chamber spring arm
 - replacing5-109
 - vacuum chamber spring arm5-106
 - removing5-106
- S**
- scanner cable5-135, 5-149
 - removing5-149
 - replacing5-150
 - seal
 - fill chamber pad5-69
 - removing5-69
 - fill chamber receiver pad
 - replacing5-70
 - HP45 station5-80, 8-15
 - removing5-80
 - replacing5-83
 - prep station8-7
 - vacuum chamber gasket5-102
 - fasteners5-103
 - removing5-102
 - replacing5-104
 - semi-annual maintenance7-6
 - sensor
 - cobalt paper
 - removing5-147
 - replacing5-148
 - paper5-147
 - vacuum door1-21
 - sep (separator) vacuum test6-17
 - service kit
 - spare parts7-3
 - tools7-2
 - shrouded drill bit5-6
 - spanner nut, vacuum regulator5-214
 - spare parts7-3
 - spring arm rod, vacuum chamber8-13
 - spring contact
 - upper hood fan5-17
 - spring contacts
 - upper hood fan5-21
 - removing5-21
 - replacing5-23
 - spring lever, vacuum chamber5-112
 - removing5-112
 - replacing5-112
 - supplies, loading3-6
 - syringe1-22, 5-95, 8-17
 - removing5-95
 - replacing5-96
 - Syringe Cal5-95, 6-9
 - syringe digital signals test6-16
 - syringe leak test4-8, 6-12
 - syringe pumps cover5-14, 8-37
 - removing5-14
 - replacing5-15
 - syringes
 - priming3-9, 6-9
-

system cabinet5-3
 interlock guide plates7-10
 upper hood5-3
 system error messages4-2
 V0024-5
 V0034-5
 system specifications3-2

T

tech check7-4
 tech pane6-1
 accessing6-2
 field service tab6-8
 ink drawer tab6-6
 tester board tab6-6
 teseter paper3-8
 test adapters3-8, 6-6
 tester assembly5-131
 fasteners5-133
 removing5-131
 replacing5-134
 tester assembly cables5-132
 tester backplane board5-132, 8-28
 tester board tab
 tech pane6-6
 tester fixture cover5-137
 removing5-137
 replacing5-138
 tester interconnect PC board5-139
 removing5-139
 replacing5-141
 tester latch5-142
 fasteners5-142
 removing5-142
 replacing5-143
 tester station1-2, 1-24, 1-26, 5-131, 8-20
 adapter not detected4-13
 assembly8-20
 blank test pattern4-13
 cartridges for single family fail4-14
 cobalt paper sensor5-147
 removing5-147
 replacing5-148
 components1-24
 cover1-24, 8-23
 cover fixture8-21
 front paper guide5-144, 8-22
 removing5-144
 replacing5-145
 handle8-23
 HP45 leaks4-11
 interconnect board5-131, 8-22
 interconnect PC board1-25, 5-139
 removing5-139
 replacing5-141
 main vacuum manifold tubing
 connection5-210
 orderable parts8-19
 paper sensor8-22
 PC backplane board1-28
 PC board set1-27, 5-170
 cable connections5-171
 fasteners5-171
 removing5-170
 replacing5-172
 process1-4
 scanner cable5-135, 5-149
 removing5-149
 replacing5-150
 tester assembly5-131
 removing5-131
 replacing5-134
 tester fixture cover5-137
 removing5-137
 replacing5-138
 tester latch5-142
 removing5-142
 replacing5-143
 top latch5-151, 8-21
 removing5-151
 replacing5-151
 thru-beam paper sensor8-22
 tools7-2
 top latch, tester5-151
 removing5-151
 replacing5-151
 top latch, tester station8-21
 touchscreen assembly5-159, 8-26
 cable connections5-159
 fastener5-160
 mounting keys5-161

removing5-159
replacing5-160
troubleshooting4-1
tubing
fluid pump connection5-180
ink nest5-124
level switch/siphon connection5-197
liquid separator vacuum connection5-184
liquid separator/vacuum wand
connection5-185
liquid separator/waste tank connection5-186
main vacuum manifold/liquid separator
connection5-210
main vacuum manifold/tester connection5-210
main vacuum manifold/vacuum pump
connection5-210
tester vacuum5-133
vacuum chamber spring arm5-111
removing5-111
replacing5-111
vacuum pump connection5-201, 8-34
vacuum regulator/main vacuum manifold
connections5-214
tubing, orderable parts8-40

U

uncrating instructions2-1, 3-1
upper hinge arms, vacuum chamber5-98
removing5-98
replacing5-100
upper hood5-3
fan5-16
cable5-24
removing5-24
replacing5-25
cable connection5-21
cable tie5-17
cables5-17
fasteners5-18
removing5-16
replacing5-18
spring contacts5-21
removing5-21
replacing5-23
fan bracket assembly5-17

removing5-3
replacing5-4
upper hood fan8-38
power contacts8-38

V

vacuum chamber
door
replacing5-63
Vacuum1-21
vacuum1-4
vacuum chamber8-11
dispense lines5-53
door5-59
fasteners5-61
removing5-59
door sensor1-21, 5-119
fasteners5-55
fill station5-52
removing5-52
gasket5-102, 8-14
removing5-102
replacing5-104
hinge5-111
ink and door sensors5-117
cables5-118
removing5-117
replacing5-119
ink sensor5-118
overflow4-8
PC board1-20, 8-27
receiver plate8-13
reed sensor8-16
replacing5-55
RFID reader1-21, 8-16
RFID reader board5-53
spring arm rod5-106, 8-13
removing5-106
replacing5-109
spring arm tubing5-111
removing5-111
replacing5-111
spring lever5-112
removing5-112
replacing5-112

- upper hinge arms5-98
 - removing5-98
 - replacing5-100
- vacuum failure4-7
- vacuum tubing5-54
 - verifying installation5-59
- vacuum chamber assembly1-20
- vacuum chamber door1-18, 8-12
 - hinge arm8-12
 - upper arm8-14
- vacuum chamber gasket
 - fasteners5-103
- vacuum chamber PC board5-52, 5-174
 - cable connections5-175
 - fasteners5-175
 - HP45 cables5-75
 - ink and door sensor cables5-118
 - reed sensor cable5-73
 - removing5-174
 - replacing5-176
- vacuum chamber reed sensor5-72
 - cable5-73
 - removing5-72
 - replacing5-73
- vacuum chamber seal pad4-8
- vacuum distribution manifold5-204, 8-36
 - cable connections5-205
 - fasteners5-206
 - HP45 tubing5-75
 - removing5-204
 - replacing5-206
 - tubing connections5-205
- vacuum door sensor1-21
- vacuum filter
 - prep station5-49
 - removing5-49
 - replacing5-50
- vacuum filter, prep station8-8
- vacuum manifold, main5-209
 - cable connections5-209
 - fasteners5-211
 - liquid separator tubing connection5-210
 - removing5-209
 - replacing5-211
 - tester tubing connection5-210
 - vacuum pump tubing connection5-210
- vacuum pump1-31, 5-201, 8-34
 - cable connection5-201
 - fasteners5-202
 - removing5-201
 - replacing5-202
 - tubing connection5-201
- vacuum regulator5-213
 - removing5-213
 - replacing5-215
 - spanner nut5-214
 - tubing connections5-214
- vacuum regulator assembly8-35
- vacuum system1-31, 5-201
 - diagram1-40
 - liquid separator1-33
 - main manifold1-31
 - prep station error4-5
 - pump1-31
 - water trap1-32
- vacuum tubing
 - HP45 station5-75
- Vacuum Wand5-195
- vacuum wand
 - failure4-15
 - servicing7-13
- valve
 - fluid distribution5-87
 - removing5-87
 - replacing5-88
- ventillation
 - upper hood fan5-16
- ventillation fan
 - electrical tower5-26

W

- waste container1-34
- waste drain valve8-34
- waste tank3-7
- waste valve1-34
- water trap1-32
- weight3-2
- wipes3-8
- Wireless Modem5-163
- wiring diagram
 - AC power1-37

DC power1-38 work surface5-11
fasteners5-14

remove5-11 replace5-12
syringe pumps cover5-14