


Absorbent pad Installation Service Representative Revised 09/19/2013

whoeckh@retailinkjet.com to suggest improvement

Objective: Installing an Absorbent pad under the infusion pump to make cleanup of ink spills easier.



STEP	DISCUSSION	ACTION – DO THIS
1	Remove work surface	 Clear any loose items from the top of the work surface. Remove the tester cover by pulling forward and set it aside. Raise the vacuum chamber door by pulling forward and up on the handle until it locks into the open (top) position. Open the left upper drawer (labeled REFILL ADAPTERS) to gain access to the underside of the work surface and remove the thumb screw fastener. Open the right upper drawer (labeled TEST ADAPTERS) to gain access to the underside of the work surface and remove the thumb screw fastener. Grasp the sides of the work surface and pull towards you to slide it off the machine.
2	Remove lower back cover	 Using a 3/16" Allen tool, remove the two fasteners securing the lower back cover Grasp the handle on cover and pull top of cover away from ink center Lift up on cover to release the 2 interlocking tabs and set cover aside

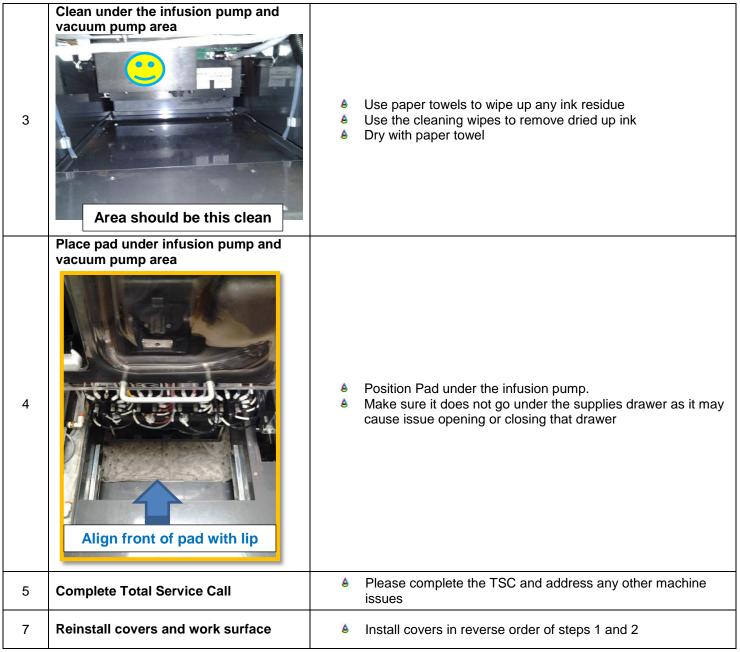

Finished Product

