




**Objective:** This week's issue will cover the following subjects.

### **Prep Station Vacuum ports**

The prep station vacuum ports need to be cleaned out when there is low suction. Using a small paper clip that has been straightened out, insert the clip into vacuum ports about 1-1 ½ inches. You will not damage the prep station as the body is made out of metal.

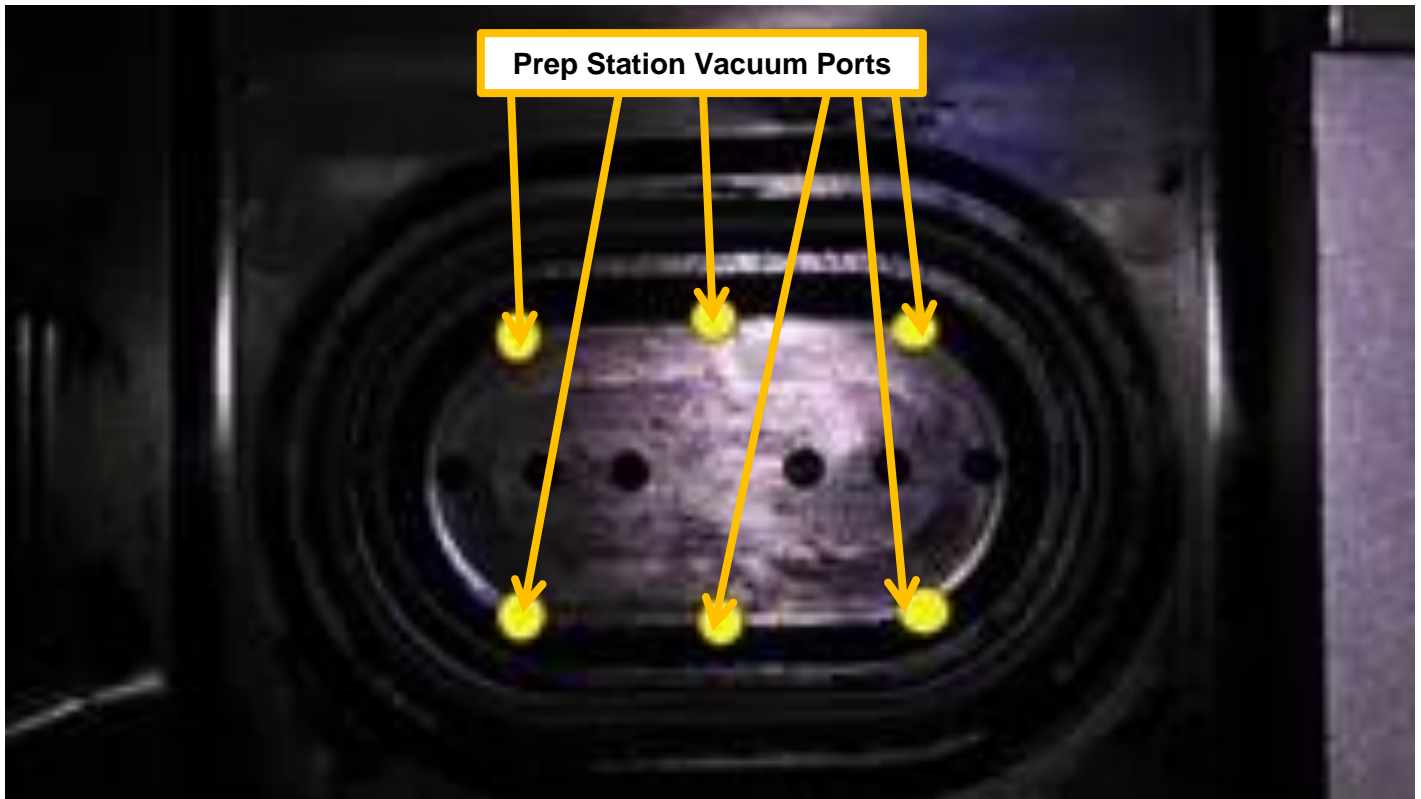

**Contact Information** For service related support, please call RIS @ 1-858-779-9148 Option 3  
**The location of the "Top Issues" platform has changed.** Please bookmark the following URL for easy access – <http://training.retailinkjet.com/top10/>