


## Compression Fitting on the Separator

The white compression fitting is now being included with the separator bottle due to the compression fittings not being reassembled correctly or missing some parts after some service calls. The existing fitting is reusable, but if any parts are missing, please use the included compression fitting.

Please check to make sure all parts are included and oriented in the correct direction prior to installation. This is important to prevent leakage from the bottom of the separator during normal use.

Please refer to the image below for guidance when reassembling the compression fitting:

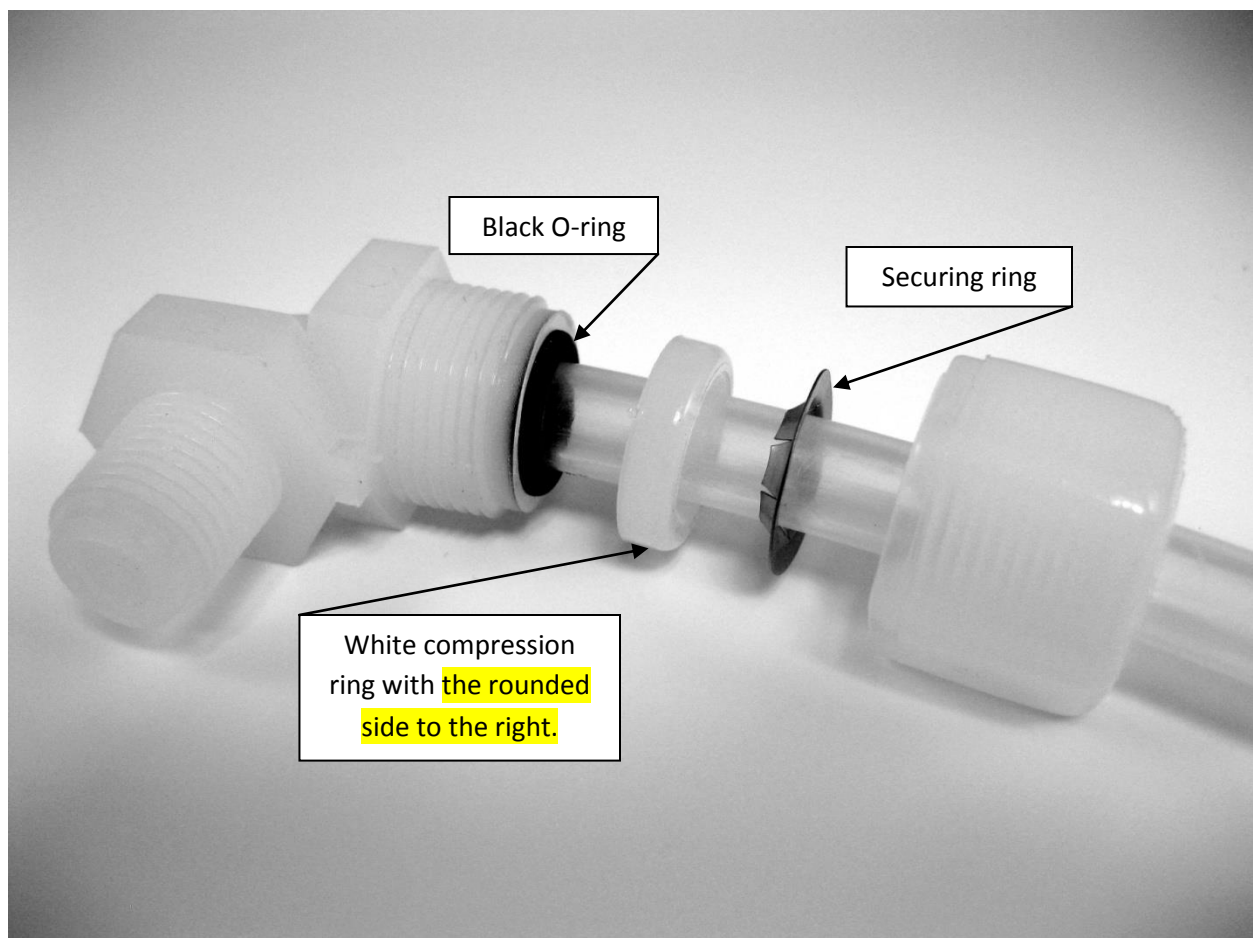

Tips for successful installation:

- Make sure you put the cap of the fitting on the tube first.
- Place all three rings together on the fitting body and push the tube into the fitting through the three rings until the end of the tube bottoms out. Now tighten the cap. This will make sure the rings are correctly spaced as shown below:

